

Fault indication by preglow indicator lamp

- Lamp fails to light up even during preglowing, lights up for approx. 1 minute while driving.
Fault: One or several glow plugs defective.
- Lamp fails to light up during preglowing and also while driving.
Fault: Indicator lamp defective, line interruption to the indicator lamp, preglow time-delay relay defective.
- Lamp lights up permanently.
Fault: Preglow time-delay relay defective (relay sticking).
- Lamp fails to light up, engine is hard to start or fails to start altogether.
Fault: Short circuit on one or several glow plugs, line interruption, preglow time-delay relay defective.