


68-230 Removal and installation of cover on shift lever


Removal

- 1 Disconnect rubber sleeve on cover.

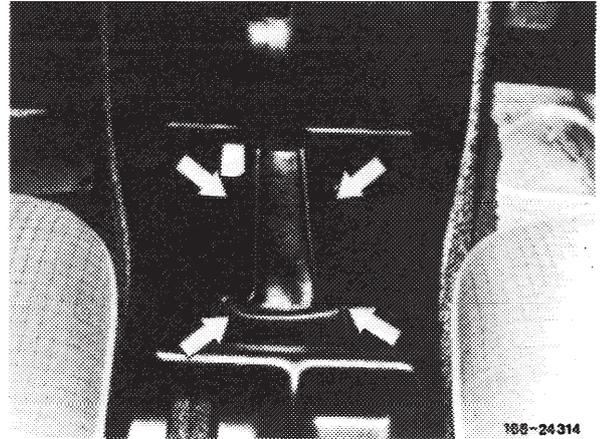

- 2 Pull off plug connections on switches and remove cover.

- 3 Separate plugs from switches and remove cover toward the rear.

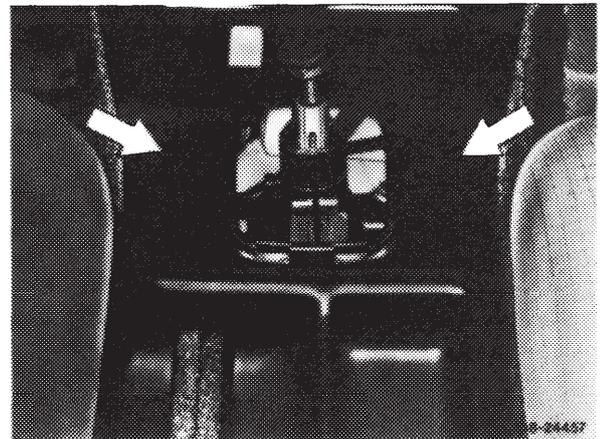


Installation

- 4 For installation proceed vice versa

68-23 1 Removal and installation of cover on shift lever (automatic transmission)

Removal, installation

- 1 Lift cover in rear range by means of plastic wedge and pull out toward the rear.
- 2 Pull plug connections on switches and remove cover,

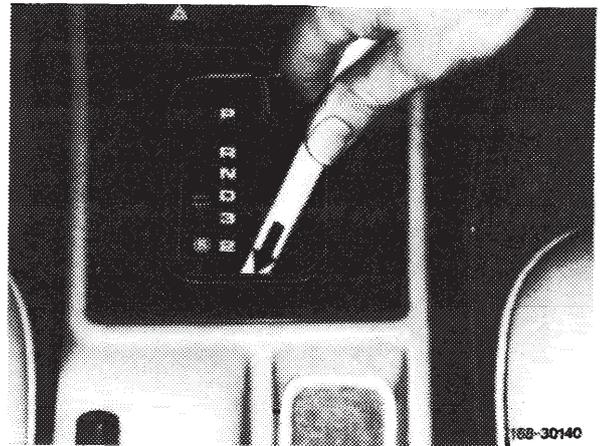

Installation

- 3 Attach plug connections to switches. Introduce cover with holding lugs at front and engage rear locks.

